

Maintenance & Cleaning

SPC click

sense
THAT MAKES SENSE



Maintenance & Cleaning

The frequency of cleaning always depends on the degree of contamination. The Sense floors are provided of a PUR coating which makes cleaning easier.

To prevent dirt from being brought in from the outside, it is advisable to place a suitable entrance mat, of sufficient size, in each entrance.

The newly laid PVC floor must be protected against damage by furniture. Therefore, provide the furniture with the correct protection equipment (see website www.scratchnomore.nl).

Improper protection of furniture can lead to scratches or streaks, especially with the current super matt top layers. Do not slide heavy objects or furniture across the floor.

The first cleaning should take place immediately after the floor has been completely laid and rolled. Cleaning with a dash of Ph-neutral cleaner or rather a Sense PVC cleaner and lukewarm water is usually sufficient.

Remove spilled liquids immediately, especially if these liquids contain bleach.

Daily cleaning

Sweep up or vacuum up loose dirt (vacuum cleaner with soft nozzle).

Remove stubborn dirt locally with a Ph-neutral PVC cleaner.

1 - 4 weekly maintenance

Wipe the floor with a cloth wrung out in lukewarm water, with a Ph-neutral PVC cleaner or washing-up liquid.

Cleaning with a scrubber drier with a soft white pad is permitted provided a Ph neutral PVC cleaner is used. Note that the floor becomes slippery when wet.

Periodic maintenance

Depending on the use, the floor may require intensive cleaning and treatment at least once a year. Please contact the dealer for this.

Skirting

Skirtings should be placed on the new floor and cover the freed expansion space. The painted skirtings may be not be sealed on the floor at the bottom.

We wish you good luck and enjoy myour new floor...

Sense is a product of Prodinex - www.prodinex.com

